

Golf/Vento

Current Flow Diagram

No. 15 / 1

Edition 07.2006

Electrically adjustable and heated exterior mirrors

from October 1991

Notes:

For information concerning

- ◆ Position of relays and fuses
- ◆ Multi-pin connections
- ◆ Control units and relays
- ◆ Earth connections

→ List of Fitting Locations!

For information concerning


- ◆ Fault Finding Programs

→ guided fault finding

Golf/Vento

Current Flow Diagram

No. 15 / 2

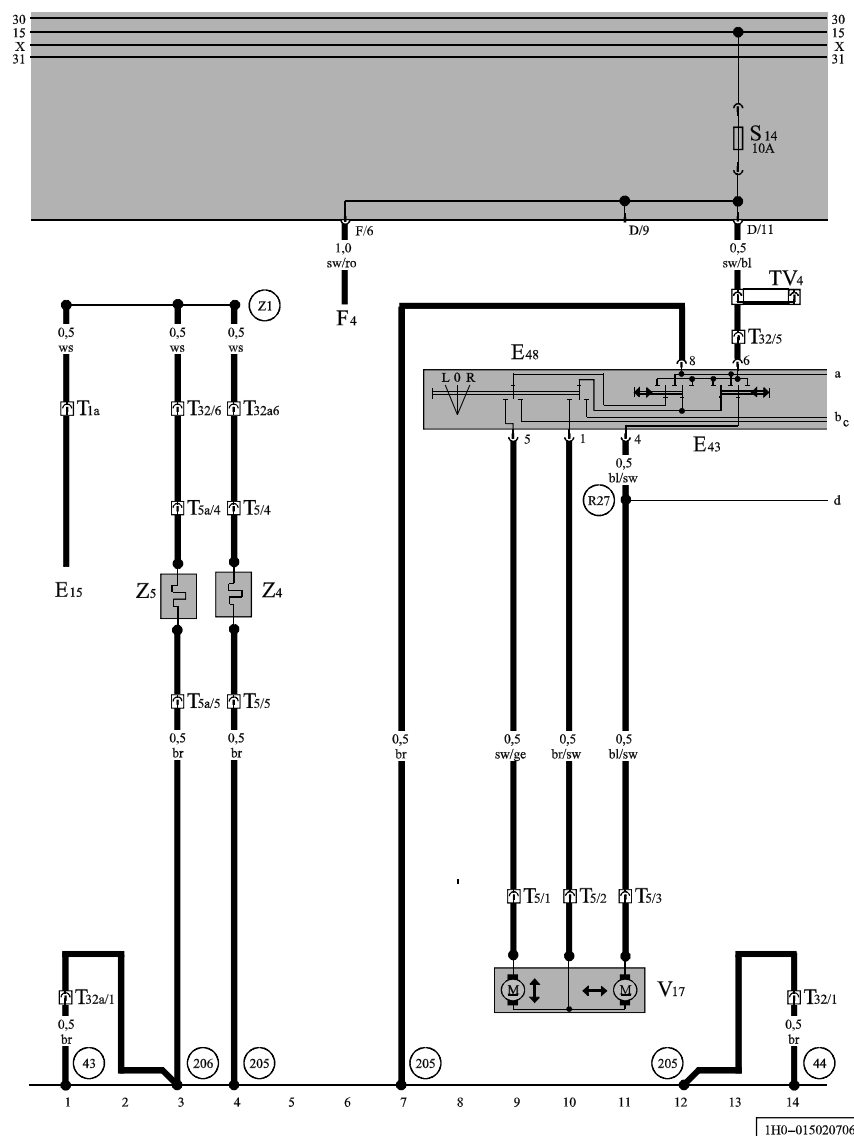

Exterior mirror adjustment driver side, mirror adjustment switch, heated exterior mirror on driver and front passenger side


- E15 - Heated rear window switch
- E43 - Mirror adjustment switch
- E48 - Mirror adjustment change-over switch
- F4 - Reversing light switch
- TV4 - Terminal 15 wiring junction
- T1a - Single connector, behind the relay plate
- T5 - 5-pin connector, in driver door
- T5a - 5-pin connector, in front passenger door
- T32 - 32-pin connector, on lower part of left A-pillar
- T32a - 32-pin connector, on lower part of right A-pillar
- V17 - Mirror adjustment motor (driver side)
- Z4 - Heated exterior mirror on driver side
- Z5 - Front passenger side heated exterior mirror
- 43 - Earth point, lower part of right A-pillar
- 44 - Earth point, lower part of left A-pillar
- 205 - Earth connection, in driver door wiring harness
- 206 - Earth connection, in front passenger door wiring harness
- R27 - Connection (mirror adjustment), in driver door wiring harness
- Z1 - Connection 1, in mirror adjustment/heating wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Golf/Vento

Current Flow Diagram

No. 15 / 3

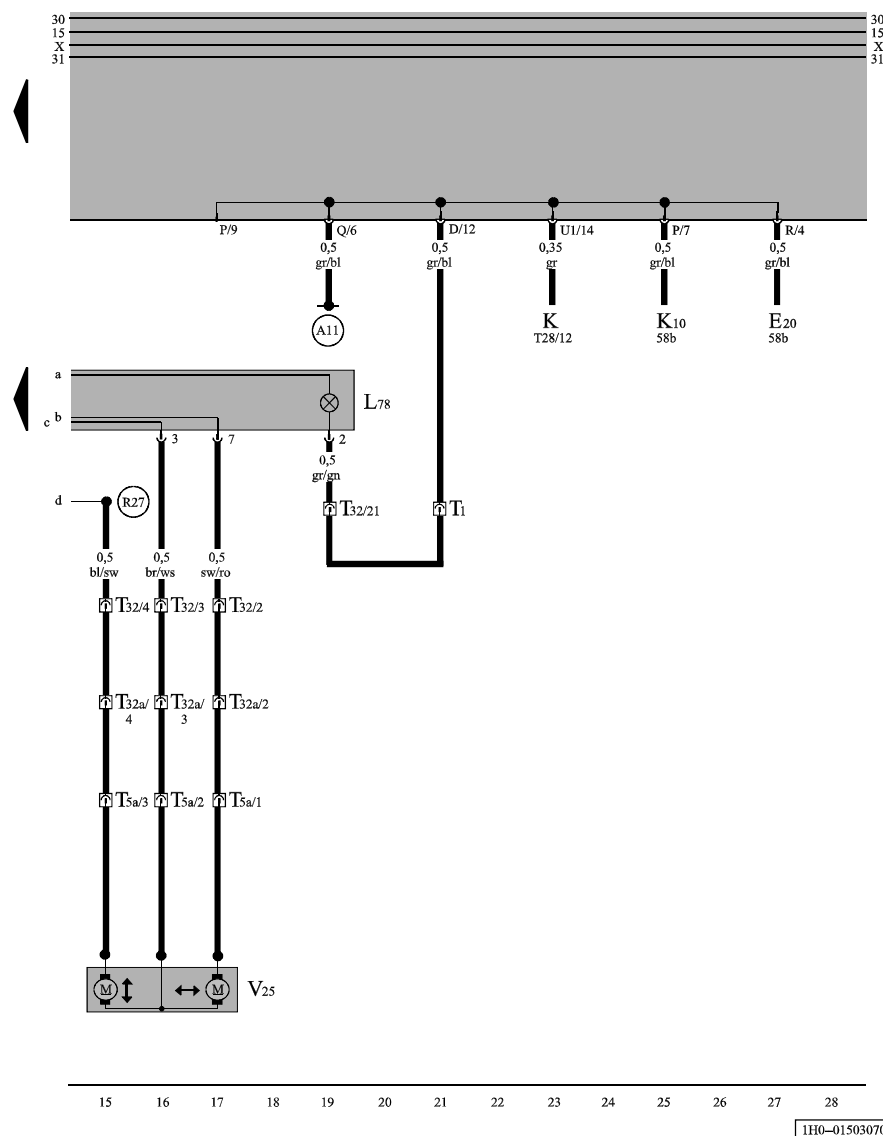

Exterior mirror adjustment front passenger side, mirror adjustment switch illumination bulb

- E20 - Illumination regulators - switches and instruments
- K - Dash panel insert
- K10 - Heated rear window warning lamp
- L78 - Mirror adjustment switch illumination bulb
- T1 - Single connector, behind the relay plate
- T5a - 5-pin connector, in front passenger door
- T28 - 28-pin connector
- T32 - 32-pin connector, on lower part of left A-pillar
- T32a - 32-pin connector, on lower part of right A-pillar
- V25 - Mirror adjustment motor (front passenger side)
- A11 - Positive connection (58b), in dash panel wiring harness
- R27 - Connection (mirror adjustment), in driver door wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

1H0-015030706