

Golf/Vento

Current Flow Diagram

No. 5 / 1


Edition 03.2001

Heated seats, driver's and front passenger's side

From October 1991

Position of relays:

For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.

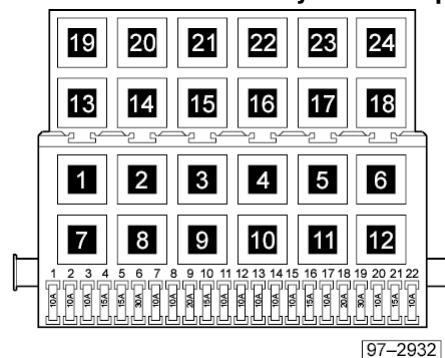



Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red

Golf/Vento

Current Flow Diagram

No. 5 / 2

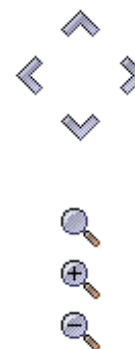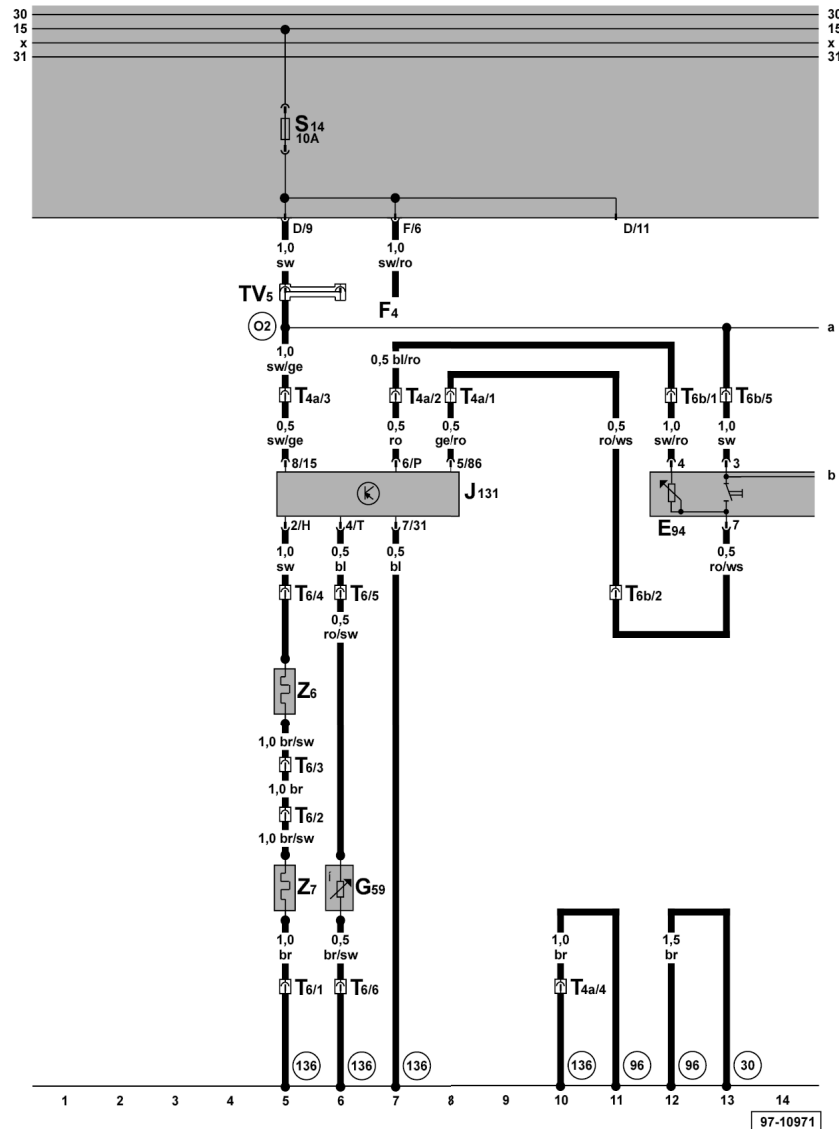


Heated seats, driver's side

- E94 - Heated driver seat adjuster switch with regulator
- F4 - Reversing light switch
- G59 - Driver's seat temperature sensor
- J131 - Heated driver seat control unit, under driver's seat
- T4a - 4-pin connector, under driver's seat
- T6 - 6-pin connector, under driver seat
- T6b - 6-pin connector, behind dash panel, centre
- TV5 - Terminal 15a junction box, above the relay plate
- Z6 - Heated driver's seat
- Z7 - Heated driver's seat backrest
- 30 - Earth point -1-, next to relay plate
- 96 - Earth connection -1-, in seat heating wiring harness
- 136 - Earth connection -2-, in seat heating wiring harness
- O2 - Positive (+) connection (15), in heated seats wiring harness

Golf/Vento

Current Flow Diagram

No. 5 / 3

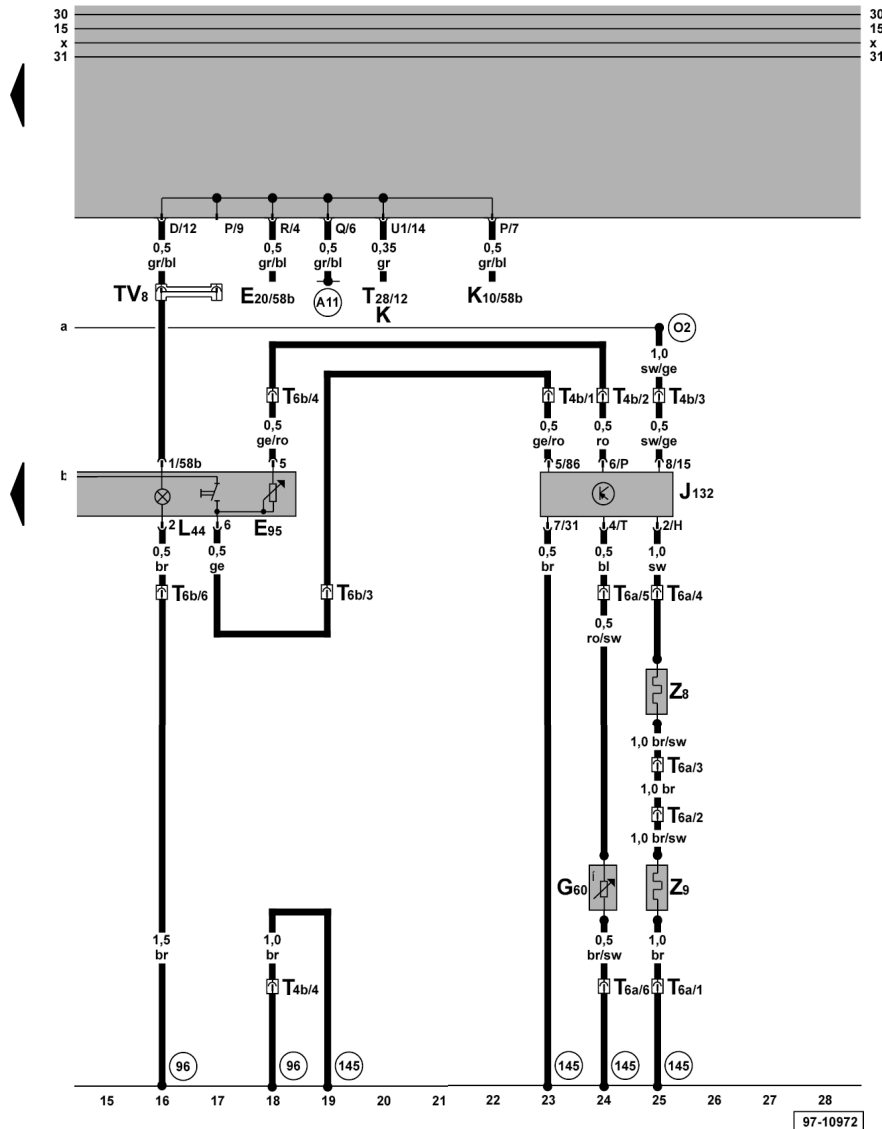

Seat heating for passenger's side

- E20 - Switches and instruments - lighting control
- E95 - Heated front passenger's seat adjuster switch with regulator
- G60 - Front passenger's seat temperature sensor
- J132 - Heated front passenger's seat control unit, under front passenger's seat
- K - Dash panel insert
- K10 - Heated rear window warning lamp
- L44 - Seat heating switch light bulb
- T4b - 4-pin connector, under front passenger seat
- T6a - 6-pin connector, under front passenger's seat
- T6b - 6-pin connector, behind dash panel, centre
- T28 - 28-pin connector, on dash panel insert
- TV8 - Terminal 58b junction box, above the relay plate
- Z8 - Heated front passenger's seat
- Z9 - Heated front passenger's seat backrest
- 96 - Earth connection -1-, in seat heating wiring harness
- 145 - Earth connection -3-, in seat heating wiring harness
- A11 - Positive (+) connection (58b), in wiring harness for instruments
- O2 - Positive (+) connection (15), in heated seats wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink