

Golf/Vento


Current Flow Diagram

No. 119 / 1

Edition 07.1995

Town driving lights Great Britain

From May 1995

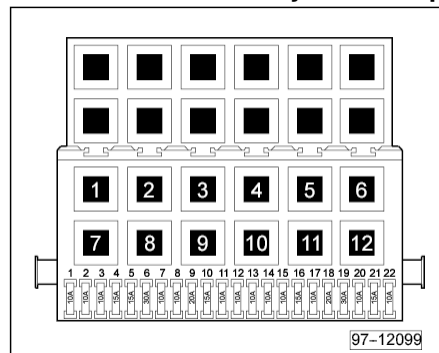
Position of relays:**For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.****Fuse colours**

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red

Golf/Vento

Current Flow Diagram

No. 119 / 2

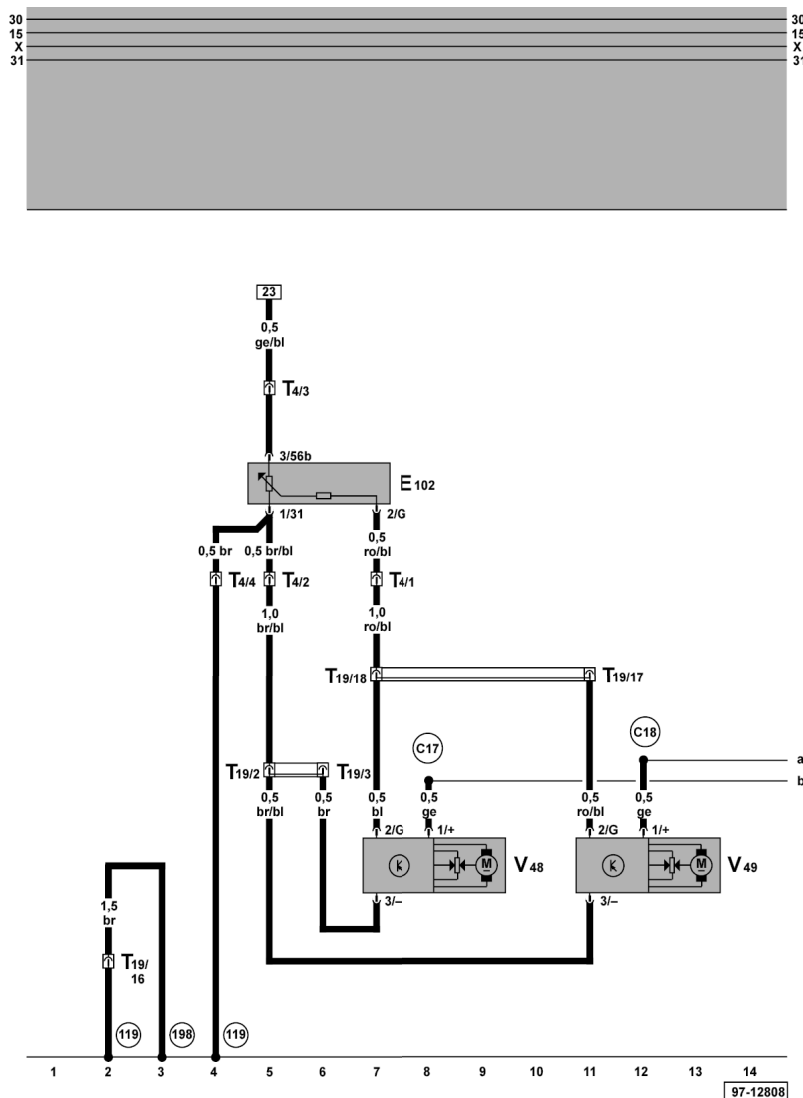

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Headlight range control


- E102 - Headlight range control adjuster
- T4 - 4-pin connector, on left of bulkhead
- T19 - 19-pin connector, in front lock carrier
- V48 - Headlight range control motor, left
- V49 - Headlight range control motor, right
- 119 - Earth connection -1-, in headlight wiring harness
- 198 - Earth connection, in front lighting wiring harness
- C17 - Connection (56b) -1-, in front lighting wiring harness
- C18 - Connection (56b) -2-, in front lighting wiring harness

97-12808

Golf/Vento

Current Flow Diagram

No. 119 / 3

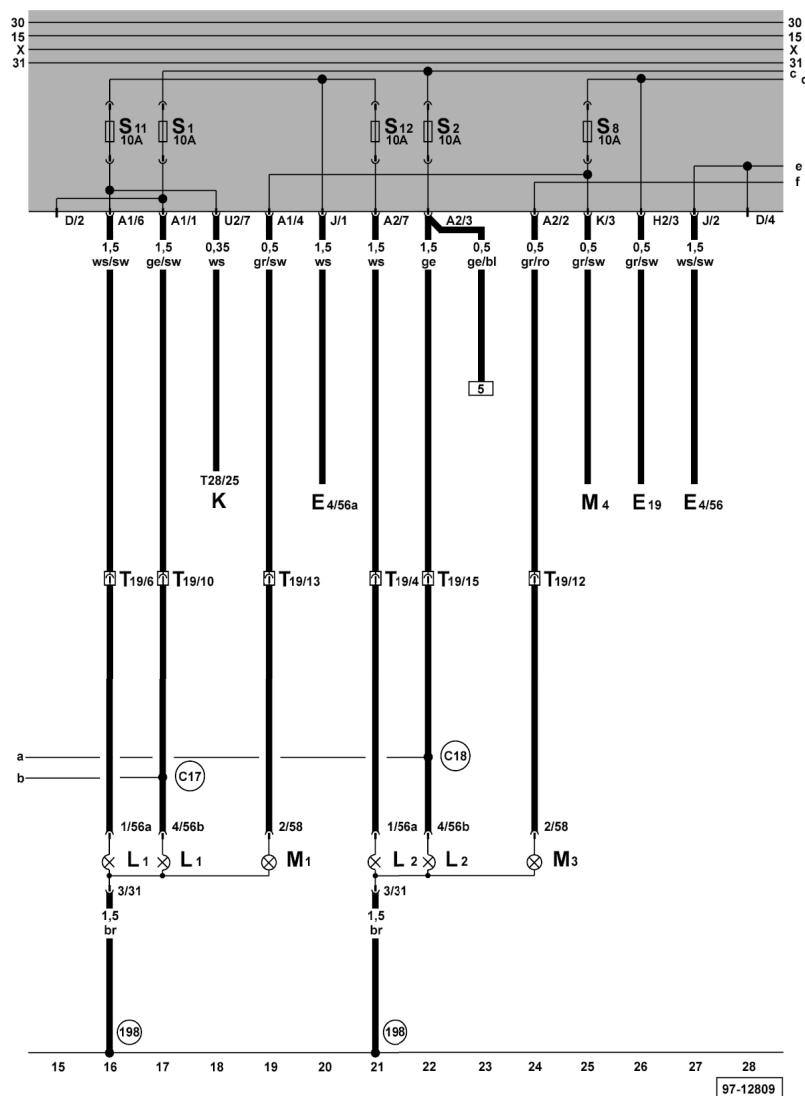

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

Headlights, side lights

- E4 - Headlight dipper/flasher switch
- E19 - Parking light switch
- K - Dash panel insert
- L1 - Twin filament bulb for headlight, left
- L2 - Twin filament bulb for headlight, right
- M1 - Side light bulb, left
- M3 - Side light bulb, right
- M4 - Tail light bulb, left
- T19 - 19-pin connector, in front lock carrier
- T28 - 28-pin connector, on dash panel insert
- 198 - Earth connection, in front lighting wiring harness
- C17 - Connection (56b) -1-, in front lighting wiring harness
- C18 - Connection (56b) -2-, in front lighting wiring harness

97-12809

Current Flow Diagram

No. 119 / 4




D	- Ignition/starter switch
E1	- Lighting switch
E4	- Headlight dipper/flasher switch
E7	- Fog light switch
E18	- Rear fog light switch
E20	- Switches and instruments, lighting control
J374	- Terminal 58b relief relay, above the relay plate
K4	- Side light warning lamp
K13	- Rear fog light warning lamp
K17	- Rear fog light warning lamp
L9	- Lighting switch light bulb
N98	- Series resistor - town driving lights
T1	- Single connector, behind dash panel, left
T1a	- Single connector, behind relay plate
T1b	- Single connector, behind relay plate
T2a	- 2-pin connector, in engine compartment, front left
T3	- 3-pin connector, behind relay plate
224	- Earth connection, in lighting switch wiring harness
B1	- Connection (56b), in steering column switch wiring harness
B10	- Positive (+) connection (30), in light switch wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink

Golf/Vento

Current Flow Diagram

No. 119 / 5

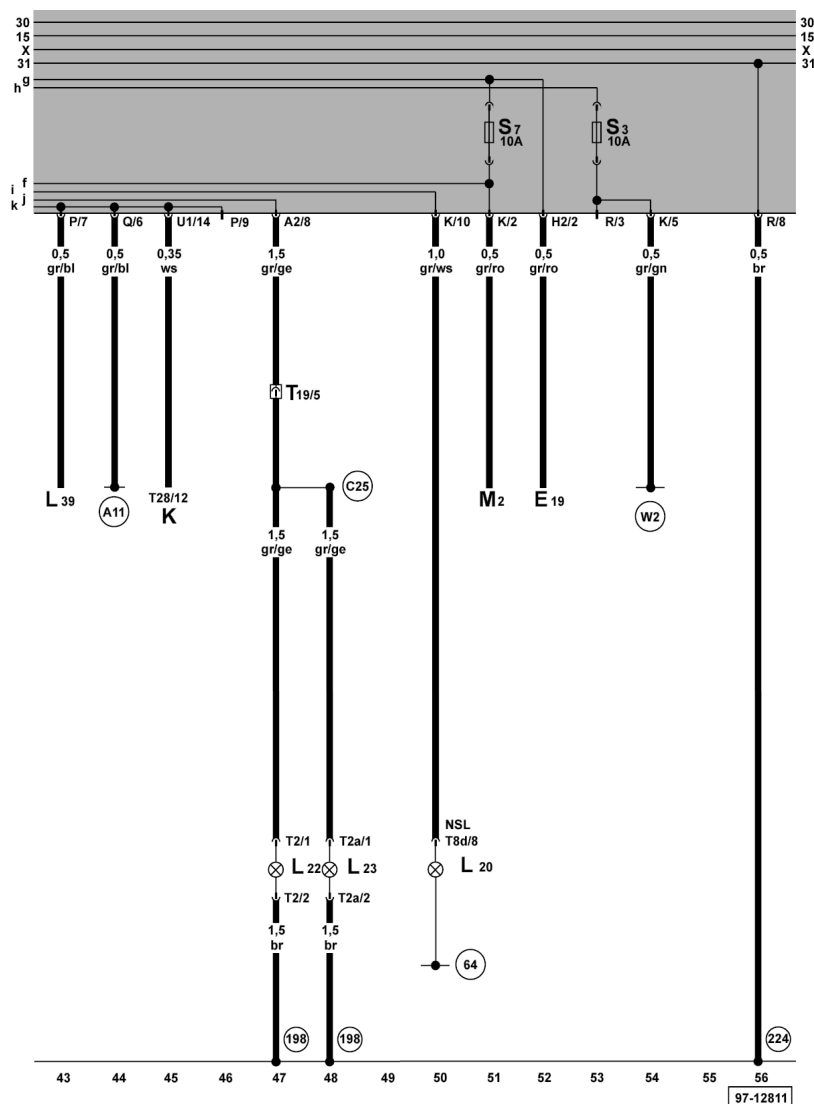

Front fog lights, rear fog light

- E19 - Parking light switch
- K - Dash panel insert
- L20 - Rear fog light bulb
- L22 - Fog light bulb, left
- L23 - Fog light bulb, right
- L39 - Heated rear window switch bulb
- M2 - Tail light bulb, right
- T2 - 2-pin connector
- T2a - 2-pin connector
- T8d - 8-pin connector
- T19 - 19-pin connector, in front lock carrier
- T28 - 28-pin connector, on dash panel insert
- 64 - Earth point, right tail light bulb holder
- 198 - Earth connection, in front lighting wiring harness
- A11 - Positive (+) connection (58b), in wiring harness for instruments
- C25 - Connection (fog light), in front lighting wiring harness
- W2 - Positive (+) connection (58), in rear wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink