

Golf/Vento

Current Flow Diagram

No. 62 / 1

Edition 09.1993

Radiator fan, 3-speed

From August 1993

Position of relays:

For alternatives to relay and fuse positions as well as multi-pin connector wiring - see "Fitting locations" section.

Fuse colours

30 A - green

25 A - white

20 A - yellow

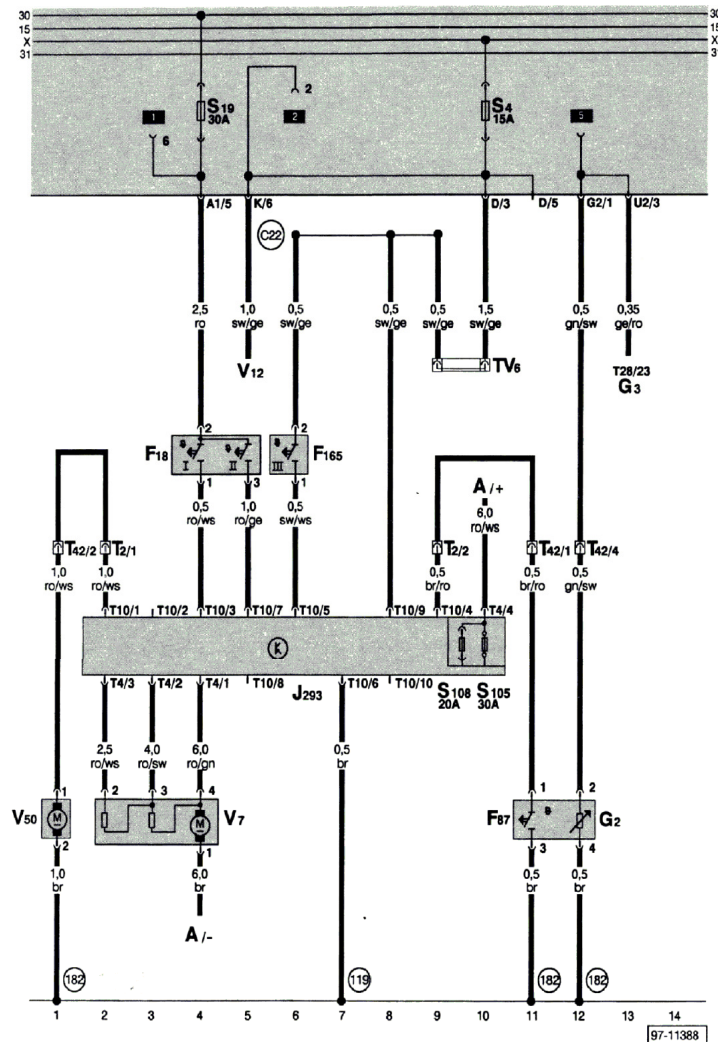
15 A - blue

10 A - red

Golf/Vento

Current Flow Diagram

No. 62 / 2

**Radiator fan control unit, temperature switch**

- A - Battery
- F18 - Radiator fan thermo-switch
- F87 - Fan run-on thermo-switch
- F165 - Radiator fan thermo-switch, third speed
- G2 - Coolant temperature gauge sender
- G3 - Coolant temperature gauge
- J293 - Radiator fan control unit, in engine compartment, left
- S105 - Radiator fan fuse, 1st speed
- S108 - Radiator fan fuse, 1st speed and magnetic coupling
- T2 - 2-pin connector, behind relay plate
- T4 - 4-pin connector
- T10 - 10-pin connector
- T28 - 28-pin connector, on dash panel insert
- T42 - On engine
- TV6 - Terminal x junction box
- V7 - Radiator fan
- V12 - Rear window wiper motor
- V50 - Coolant circulation pump
- 119 - Earth connection -1-, in headlight wiring harness
- 182 - Earth connection -1-, in engine compartment wiring harness 6-cylinder
- C22 - Connection (X), in headlight wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

97-11388